

CROMTECH™ WORK LIGHT



USER MANUAL

1 YEAR CROMTECH™ WORK LIGHT WARRANTY

CROMTECH™ is a registered trademark of Crommelins Machinery. Crommelins Machinery warrants their goods against defects in materials and workmanship under normal use and service.

The Crommelins Machinery warranty does not cover fair wear commensurate with the age of the product, any damage caused by accident, abuse, misuse, neglect or failure to observe proper operating instructions or proper machinery maintenance as described in the instruction manual.

It is the owner's responsibility to regularly maintain a product in accordance with the owner's manual and only use the equipment for its designed purpose.

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

CONSUMER ADVICE

Any claim under these warranties must be made in the warranty period from the date of purchase of the product. To make a claim under the warranty, you must return the product (with proof of purchase) to the place of purchase.

Where a failure does not amount to a major failure, Crommelins Machinery is entitled to choose between providing you with a repair, replacement or refund. To obtain compensation, you would need to provide documentary evidence of the loss or damage suffered, and documentary evidence that such loss or damage was a reasonably foreseeable consequence of a failure by Crommelins Machinery to comply with a consumer guarantee under the Australian Consumer Law.

Crommelins Operations Pty Ltd trading as Crommelins Australia and Crommelins Machinery.

CROMMELINS MACHINERY

Ph: (08) 9350 5588 Fax: (08) 9451 6381
email@crommelins.com.au www.crommelins.com.au

PO Box 352, BENTLEY WA 6982
ABN 11 008 889 656

ATTENTION

To prevent serious injury or damage:

- **DO NOT** puncture or damage batteries or use that appear to be damaged
- **DO NOT** modify batteries
- **DO NOT** try to change the batteries in any way
- **DO NOT** throw the battery into fire or water
- **DO NOT** turn on LED light when charging
- **DO NOT** look directly into the light beam

- **PLEASE** dispose of batteries in a environmentally friendly manner

CONTENTS

- 1) Carry handle
- 2) Lamp bracket and fixings
- 3) H-Base
- 4) AC Adapter Charger
- 5) DC Charge Cable

CHARGING INSTRUCTIONS

Connect the AC / DC charger to the input socket on the LED light and plug adapter to appropriate power supply. The charge indicator light turns red during charging. Once charging is complete the indicator light turns green.

CHARGING TIME - The battery will be fully charged after 6 to 8 hours

NOTE

- To prevent overheating, do not charge for more than 12 hours
- Charge with the supplied DC cable or AC adapter only
- The DC charging cord when used may become warm during prolonged charging

MAINTENANCE

Do not open the outer casing of the rechargeable lamp as there are no user-serviceable parts inside.

Opening or attempting to open or repair the lamp will void any warranty and may cause damage to the product or personal injury.

 **PLEASE** dispose of in a environmentally friendly manner